

EFFECTIVE:
18-MAY-15

CONNECTION DIAGRAM


SPACE HEATER CONNECTION DIAGRAM

PRINT:
0970798

SUPERSEDES:
24-MAR-15

SHEET:
1 OF 1

SPACE HEATER LEADS MAY BE LOCATED IN EITHER THE MAIN OUTLET BOX
OR IF SO EQUIPPED, AN AUXILIARY BOX

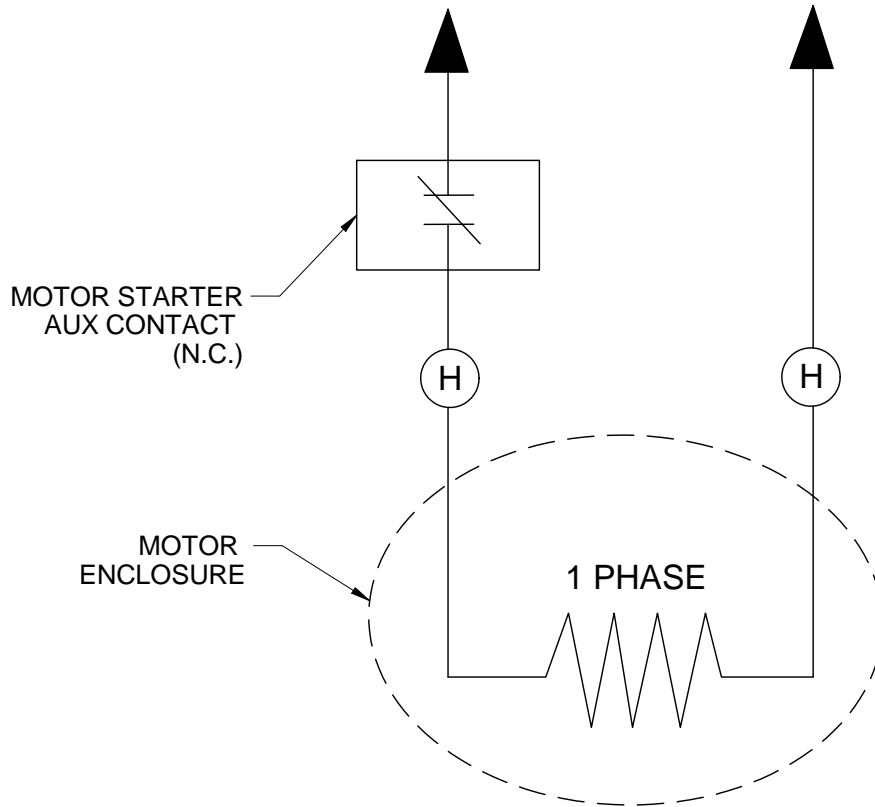

THIS EQUIPMENT IS SUPPLIED WITH
ANTI-CONDENSATION HEATERS.
HEATERS SHOULD BE ENERGIZED WHEN EQUIPMENT
IS NOT OPERATING TO PROTECT UNIT BY PREVENTING
INTERNAL CONDENSATION .
CONNECT THE "H" OR HEATER LEADS TO

VOLTS	WATTS
-------	-------

SPACE HEATER NAMEPLATE (ON MOTOR)

