





X656884

**Motor Winding Diagram**  
**12 Lead Single Voltage**  
**WYE Start / DELTA Run, or Part Winding Start**

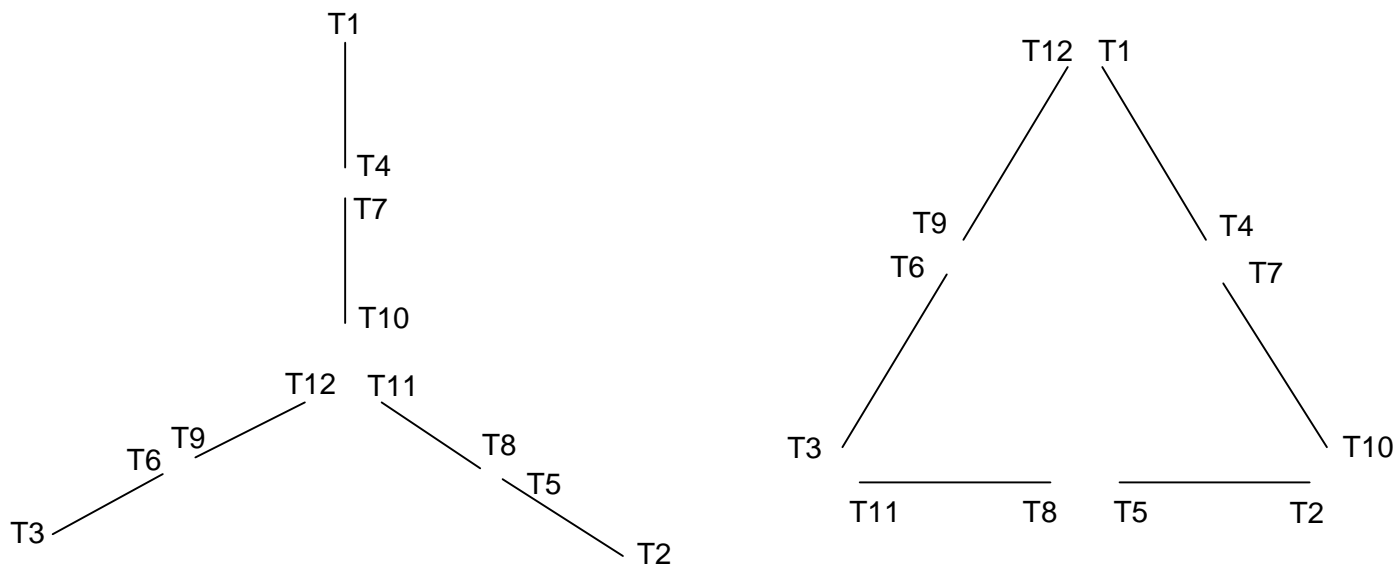


**Lead Connections**


1/2 Part - Winding Start

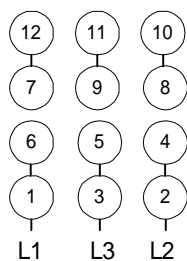

Full Winding & Delta - Run

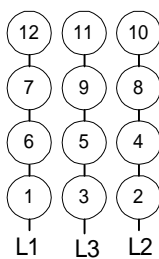

WYE Start

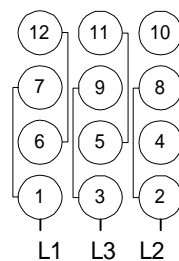

To reverse direction of rotation interchange connections L1 and L2.

Each lead may have one or more cables comprising that lead.  
In such case each cable will be marked with the appropriate lead number.