


# SUMP HEATER CONNECTION DIAGRAM

SUMP HEATER LEADS MAY BE LOCATED IN EITHER A SUMP HEATER TERMINAL BOX, OR IF SO EQUIPPED, A WINDING LEADS AUXILIARY BOX.

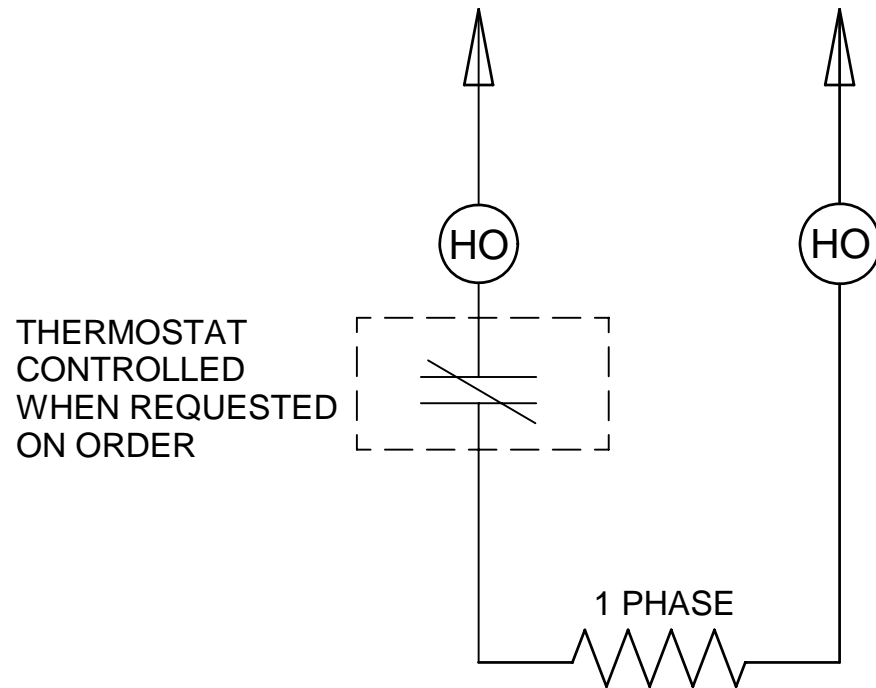

## CAUTION

This motor is supplied with one or more Oil Sump Heaters that are to be energized when the motor is not operating.

Connect the "HO" or Heater Leads to the following.

\_\_\_\_\_ Volts      \_\_\_\_\_ Watts

**915590**

SUMP HEATER NAMEPLATE (ON MOTOR)

REVISION DESCRIPTION FOR: <b>MISC</b> STL0211 -UPDATED FORMAT.	SCALE <b>NONE</b>	UNITS <b>IN</b>	TITLE <b>SUMP HEATER CONNECTION DIAGRAM</b>	<b>NIDEC MOTOR CORPORATION</b>
MATERIAL: ---	TOLERANCES ON DIMENSIONS (UNLESS OTHERWISE SPECIFIED) <b>INCHES</b> <b>mm</b>		ISSUED BY <b>R. KING</b> APPROVED BY <b>C. CADE</b>	REVISION DATE <b>23-FEB-11</b>
MUST BE COMPLIANT TO RoHS DIRECTIVE EU 2002/95/IEC AND REGULATION EC 1907/2006 (REACH) AS AMENDED			CODE      DWG NO. <b>0484171</b>	REV <b>D</b> SHEET NUMBER <b>1 OF 1</b> DWG SIZE <b>A</b>
ANGLES $X^\circ = \pm 1^\circ$				

(49958-100)