


SUMP HEATER CONNECTION DIAGRAM

SUMP HEATER LEADS MAY BE LOCATED IN EITHER A SUMP HEATER TERMINAL BOX, OR IF SO EQUIPPED, A WINDING LEADS AUXILIARY BOX.

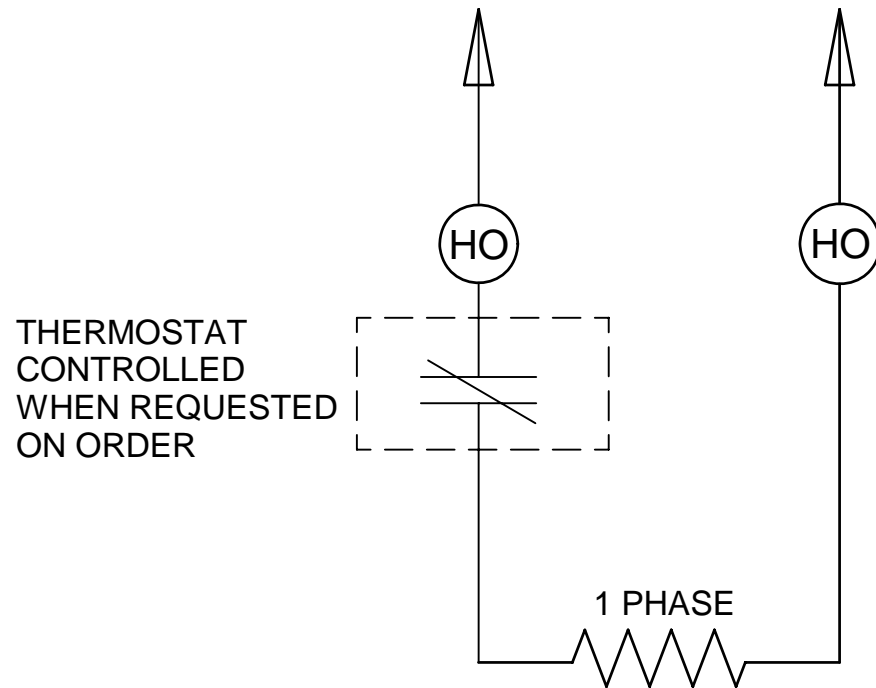

CAUTION

This motor is supplied with one or more Oil Sump Heaters that are to be energized when the motor is not operating.

Connect the "HO" or Heater Leads to the following.

_____ Volts _____ Watts

915590

SUMP HEATER NAMEPLATE (ON MOTOR)

REVISION DESCRIPTION FOR: MISC STL0211 -UPDATED FORMAT.	SCALE NONE	UNITS IN	TITLE SUMP HEATER CONNECTION DIAGRAM	NIDEC MOTOR CORPORATION
MATERIAL: ---	TOLERANCES ON DIMENSIONS (UNLESS OTHERWISE SPECIFIED) <u>INCHES</u> <u>mm</u>		ISSUED BY R. KING APPROVED BY C. CADE	REVISION DATE 23-FEB-11
MUST BE COMPLIANT TO RoHS DIRECTIVE EU 2002/95/IEC AND REGULATION EC 1907/2006 (REACH) AS AMENDED			CODE DWG NO. 0484171	REV D SHEET NUMBER 1 OF 1 DWG SIZE A
ANGLES $X^\circ = \pm 1^\circ$				

(49958-100)